

Pos.	Description	Measurement	Quantity	Item
1	Front part	37.75 x 26.25 x 1.25 in. (960 x 670 x 35 mm)	1	39562-30
2	Back wall	37.75 x 23.25 x 1.25 in. (960 x 595 x 35 mm)	1	39562-31
3	Left side panel	1 x 23 x 21.25 in. (30 x 585 x 540 mm)	1	39562-20
4	Right side panel	1 x 23 x 21.25 in. (30 x 585 x 540 mm)	1	39562-21
5	Side floor plates, large	22 x 0.75 x 13.75 in. (562 x 20 x 355 mm)	2	39562-10
6	Center floor plate, small	22 x 0.75 x 8 in. (562 x 20 x 208 mm)	1	39562-11
7	Roof incl. hinges	40.75 x 1.75 x 26.75 in. (1040 x 50 x 680 mm)	1	39562-40

Pos.	Description	Size	Quantity	Item
A	Thread screw with nut	0.236 x 2.362 in. (M6 x 60 mm)	8+1	39562-60
B	Countersunk screw	∅ 0.137 x 1.181 in. (∅ 3.5 x 30 mm)	5+1	
C	Lenshead screw	∅ 0.157 x 0.629 in. (∅ 4 x 16 mm)	16+1	
D	Checkstrap, left/right	11 in. (28 cm)	1/1	

plus 8 screws C for each

Other parts already assembled (spare parts separately available)

Description	Size	Quantity	Item
Hinge for roof	2.75 in. (7.6 cm)	3	39562-60

EN Screw the front part (1) and the back wall (2) together with the side panels (3/4).

1.

EN Now insert the floor plates (5/6).

2.

EN Install the roof (7) with the enclosed screws (B). Screw the check straps (D) to the inner sides of the roof and the side panels.

3.

4.