


Item No.		Color	Measurement	Color Code
4992	Cat wall suspension bridge	white	59 x 5.5 x 11.75 in. (1500 x 140 x 300 mm)	6
		brown		7

Pos. No.	Description	Measurement	Quantity	Item No. 6	Item No. 7
Pos. 1	Suspension Bridge	60.5 x 11.75 x 0.5 in. (1539 x 300 x 18 mm)	1	49926-10	49927-10
Pos. 2	Support	5.75 x 4.75 x 0.5 in. (150 x 125 x 15 mm)	3	49926-11	49927-11
Pos. 3	Triangular support	4 x 4 x 0.5 in. (105 x 105 x 15 mm)	6	49926-12	49927-12
Pos. 4	Wall Mounting	3.5 x 7.75 x 0.5 in. (90 x 200 x 15 mm)	3	49926-13	49927-13
Pos. a	Countersunk screw	ø 0.118 x 1.377 in. (ø 3.0 x 35 mm)	18+1	49926-20	49927-20
Pos. b	Countersunk screw	ø 0.137 x 1.181 in. (ø 3.5 x 30 mm)	12+1		
Pos. c	Metal Lenshead screw for Anchor	ø 0.137 x 1.574 in. (ø 3.5 x 40 mm)	9+1		
Pos. d	Metal screw	ø 0.137 x 2.362 in. (ø 3.5 x 60 mm)	3		
Pos. e	Washer		9+1		
Pos. f	Cover		9+1		
Pos. g	Drywall Anchor		9+1		

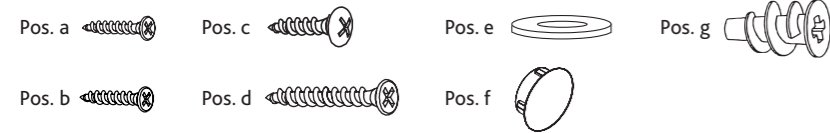

EN Advice:
 Do not sit or stand on this product.
 It is intended for pets only.
 Please note the 2 persons (one adult) are needed to securely assemble and mount the product.

EN Work Steps for dry wall mounting:

(A) For Sheetrock with stud mounting

First Step
 Assemble the parts as shown in the manual.

Second Step (mounting to a stud)

Please use a stud finder (or other technique) and a pencil. After locating the stud mark the center of the stud, which will hold the product.

Bring the platforms in final position (central hole of the platform) and mark the screw-point on the center of the studs, then mark the other two holes for the dry wall anchors as well. Use a spirit level or have someone eyeball to make sure the holes are levelled.

Third Step

Use your drill and the 1/16" bit to make pilot holes for maximum 2 inch to all markings. Be sure to keep the drill leveled.

Fourth Step

Insert drywall anchors (included) into drilled holes (not the stud holes). Be careful not to break the sheetrock.

Final Step

Mount the platform with screw (d) to the stud and fasten the platforms with screws (c) to the anchors, then cover the screws with attached caps.

(B) For Sheetrock without stud mounting

First Step
 Assemble the parts as shown in the manual.

Second Step (mounting to rocksheet only)

Bring the platforms in final position and mark the entry points for the dry wall anchors with a pencil. Use a spirit level or have someone eyeball to make sure the holes are levelled.

Third Step

Use your drill and the 1/16" bit to make pilot holes for maximum 2 inch to all markings. Be sure to keep the drill leveled.

Fourth Step

Insert drywall anchors (included) into drilled holes. Be careful not to break the sheetrock.

Final Step

Mount the platforms with attached screws to the anchors and cover the screws with attached caps.

