


Item No.	Description	Color	Code	Measurement
4458	Lea Wall Mounted Cat Bed	white	2	40 × 28 × 22 cm 15.7 × 8.7 × 11
		brown	3	
		gray	4	

Item No.	Description
44582-10	Hardware Set

Pos. Nr.	Description, Hardware Set	Measurement	Quantity
a	Metal Screw	3,8 cm 1.5 in.	2
b	Wooden Screw	4 cm 1.6 in.	2
c	Drywall Anchor	4 cm 1.6 in.	2
d	Washer	12 mm 0.47 in. diam.	2
e	Caps		2

Drywall connection

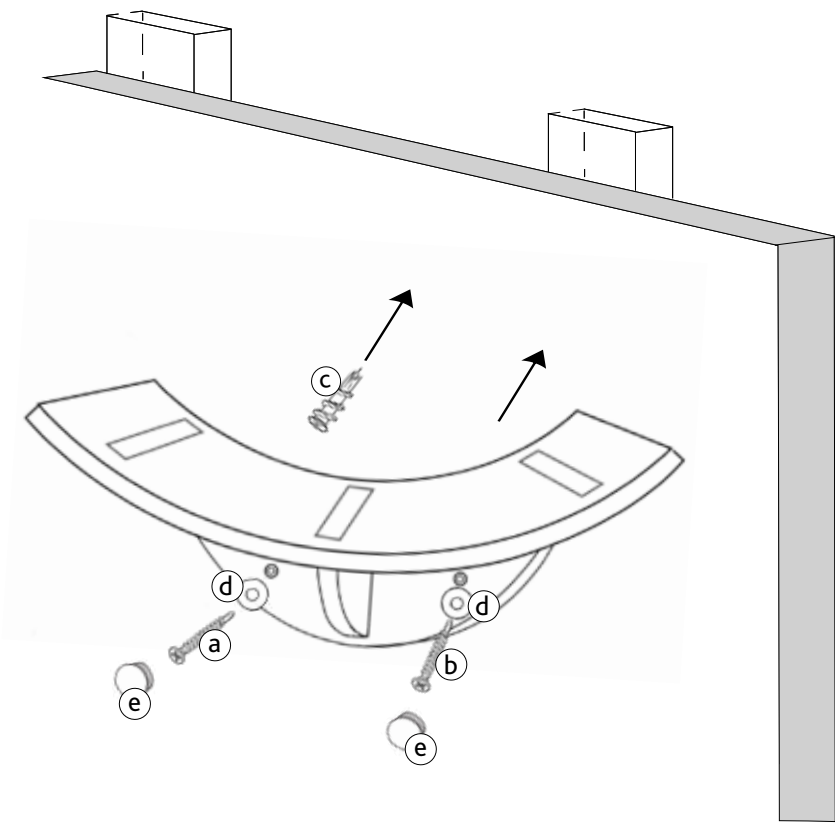

EN Work steps for drywall. Combined mounting to drywall stud and dry wall panel

First Step

For maximum strength, please use one of the two central screw holes for the connection to the stud.
Please use a stud finder (or other technique) and a pencil. Bring the product in final position and mark all screw-points.
The screw point for the stud should be central on the stud. Use a spirit level or have someone eyeball to make sure the holes are levelled.

Second Step

Use your drill and the 1/16" bit to make pilot holes for maximum 1 inch to all drywall anchor markings.

Third Step

Use your drill with a matching Phillips bit to drill the anchors into the drywall panel. Be careful to not damage the drywall panel.


Fourth Step

Mount the baord with attached screws and washers to the drywall anchor and to the stud. Cover the screws with attached caps.
Depending on the stud material you either need to use the wood screw or metal screw.

Advice:

Please note the secure assembly and mounting requires one adult person.
Drilling into drywall panel could cause dust. Please make sure to cover your furniture.

Drywall connection

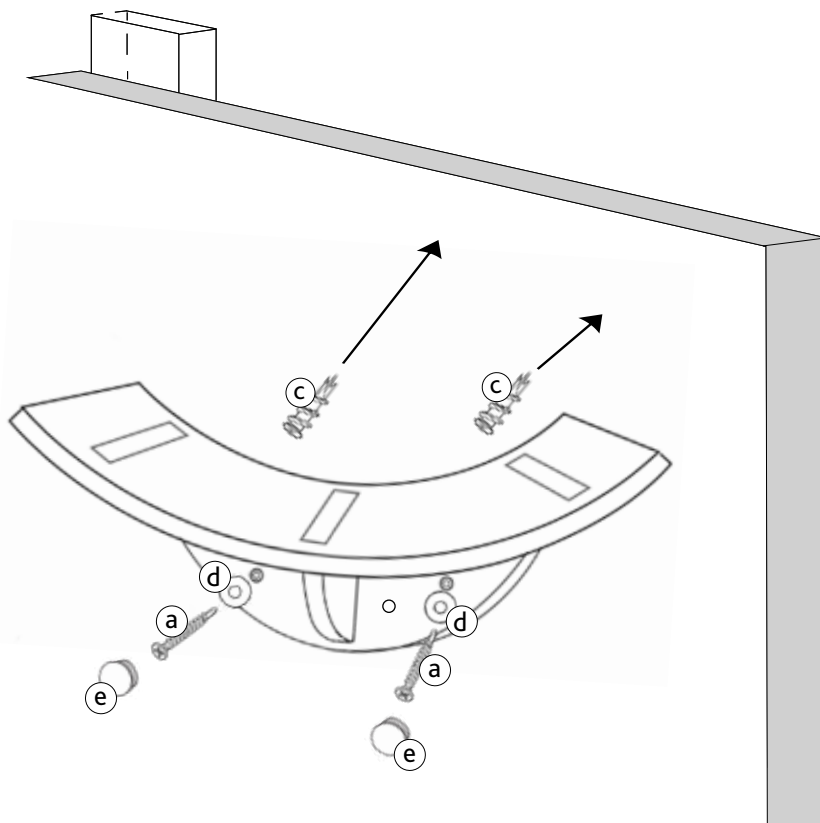

EN Work steps for drywall. Drywall connection with drywall anchor

First Step

Bring the product in final position and mark all screw-points.
Use a spirit level or have someone eyeball to make sure the holes are levelled.

Second Step

Use your drill and the 1/16" bit to make pilot holes for maximum 1 inch to all markings.

Third Step

Use your drill with a matching Phillips bit to drill the anchors into the drywall panel. Be careful to not damage the drywall panel.


Fourth Step

Mount the baord with attached metal screws and washers to the drywall anchors. Cover the screws with attached caps.

Advice:

Please note the secure assembly and mounting requires one adult person.
Drilling into drywall panel could cause dust. Please make sure to cover your furniture.

Wooden wall connection

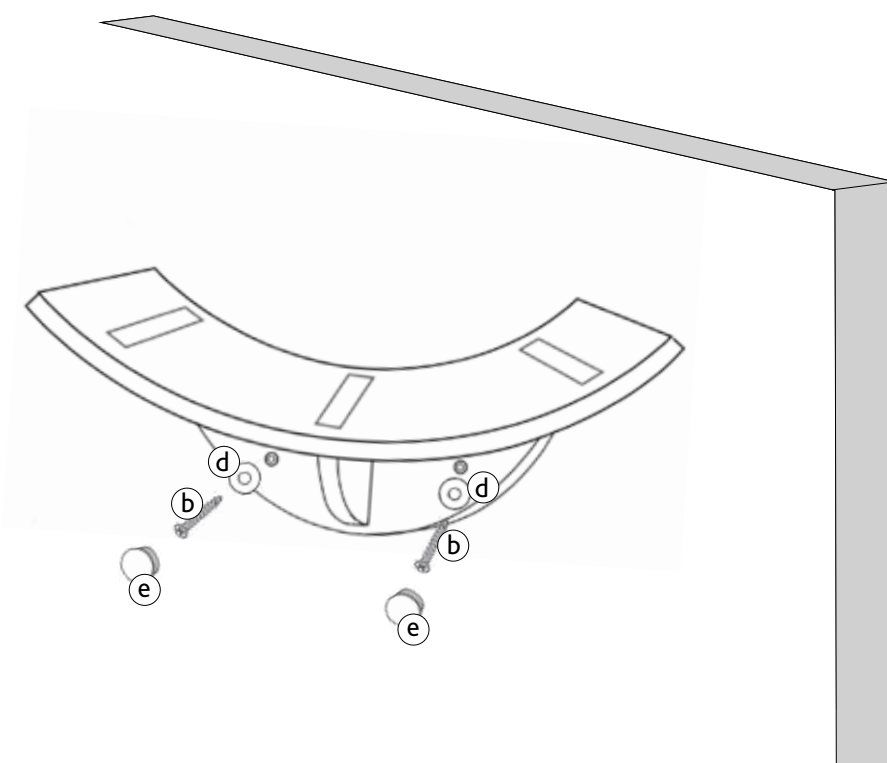

EN Work steps for wooden wall

First Step

Bring the product in final position and mark the screw-points in desired location.
Use a spirit level or have someone eyeball to make sure the holes are levelled.


Second Step

Mount the board with attached wood screws and washers to the wall on screw-points. Cover the screws with attached caps.

Advice:

Please note the secure assembly and mounting requires one adult person.

Stone wall connection

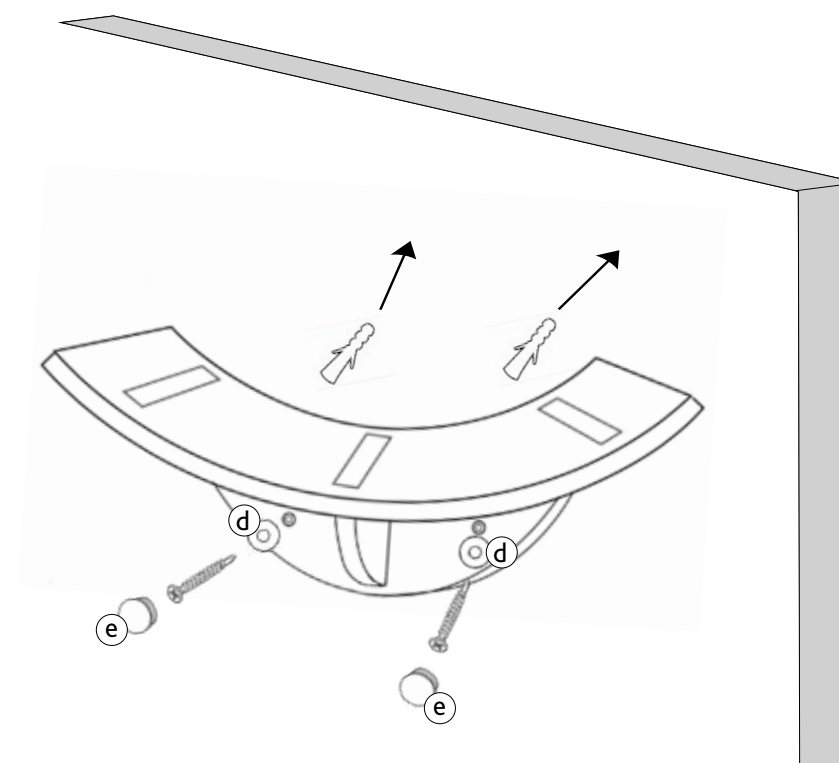

EN Work steps for stone wall

First Step

Bring the product in final position and mark the screw-points in desired location.
Use a spirit level or have someone eyeball to make sure the holes are levelled.

Second Step

Drill 3/16" holes, be sure to keep the drill level.

Third Step

Insert 3/16" wall anchors (not included) into drilled holes (some anchors might require a hammer).

Fourth Step

Mount the board with screws matching stone wall anchor (not included) to the wall. Cover the screws with attached caps.

Advice:

Please note the secure assembly and mounting requires one adult person.
Drilling into stone wall could cause dust. Please make sure to cover your furniture.