


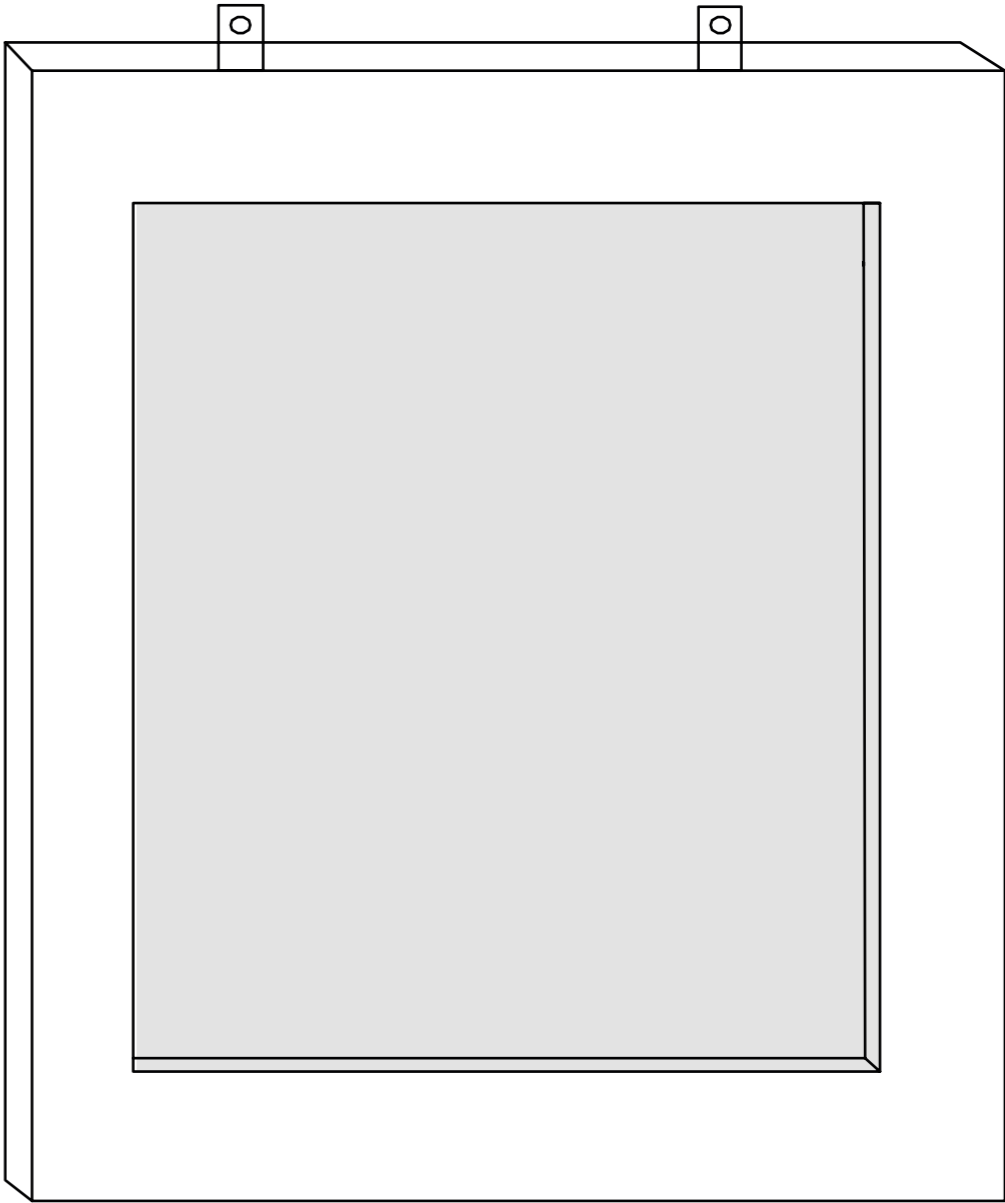


Item No.		Measurement in in./cm	Color
49971	Scratching board	15 × 22.8 in., 38 × 58 cm	white/gray

Description	Measurement in in./mm	Quantity	Item No.
Scratching board with wooden frame	15 × 22.8 in. 38 × 58 cm	1	
Hardware set		1	49891-60

Pos. No.	Description	Measurement in in./mm	Quantity
Pos. a	Wood screw (for wooden wall or wooden stud)	DIAM 0.2 × 1.9 in. ø 5 × 48 mm	2
Pos. b	Screw for stone wall	DIAM 0.25 × 2.2 in. ø 6,3 × 55 mm	2
Pos. c	Stone wall anchor, plastic	DIAM 0.25 × 2.2 in. ø 6,3 × 55 mm	2
Pos. d	Metal screw (for metal stud)	DIAM 0.15 × 1.5 in. ø 4 × 37 mm	2
Pos. e	Dry wall screw	DIAM 0.15 × 1.1 in. ø 4 × 28 mm	2
Pos. f	Dry wall anchor, metal	DIAM 0.5 × 1.3 in. ø 13 × 32 mm	2
Pos. g	Washer	DIAM 0.4 in. ø 10 mm	2



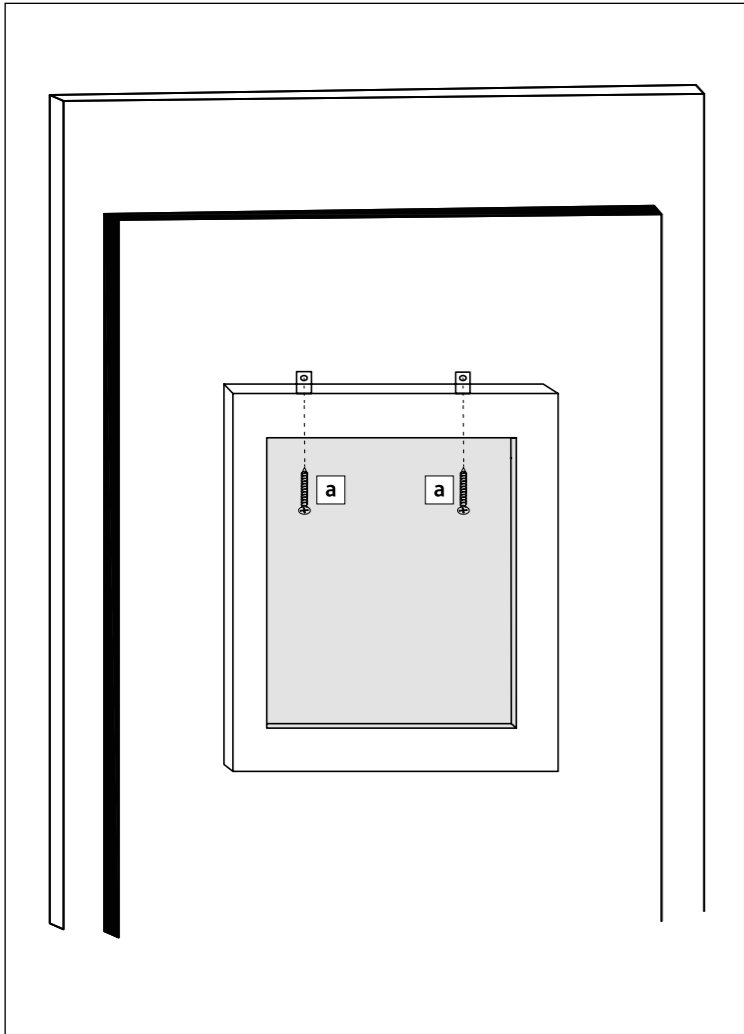

### EN Work steps for wooden wall

#### First step


Please use a pencil. Bring the product in final position and mark the screw-points in desired location. Use a spirit level or have someone eyeball to make sure the holes are levelled.

#### Final step

Mount the scratching board with attached screws to wooden wall at pilot marking.

#### Advice:

Please note the secure assembly and mounting requires one adult person.

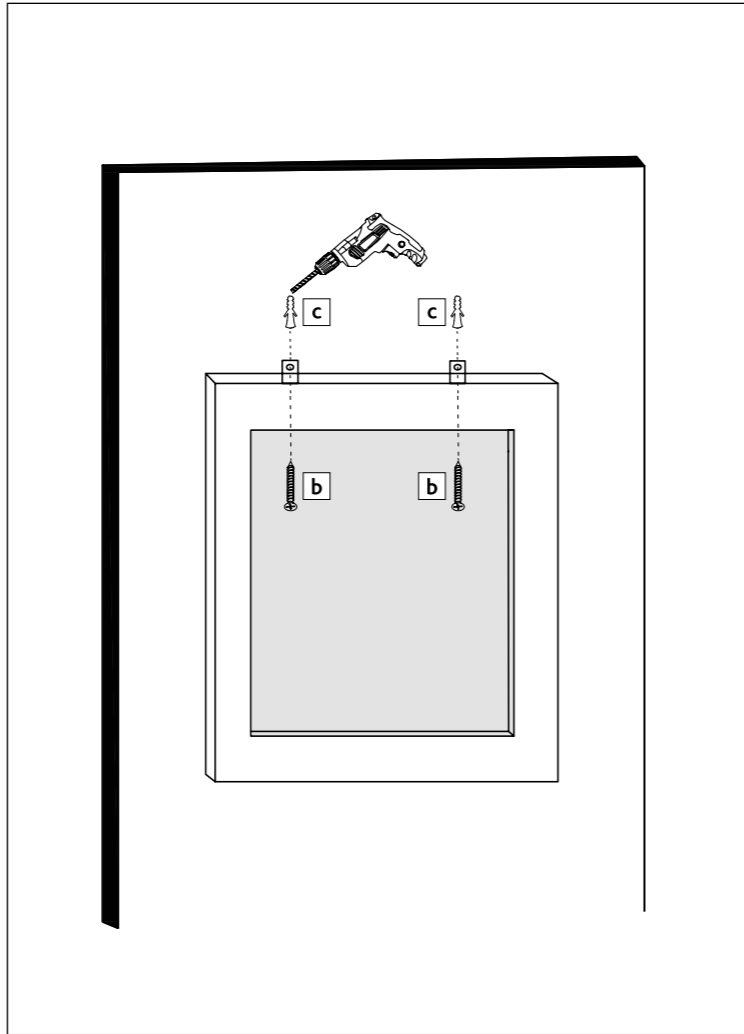

### EN Work steps for stone wall or plaster wall with anchors

#### First step

Bring the product in final position and mark the screw-points in desired location. Use a spirit level or have someone eyeball to make sure the holes are levelled.

#### Second step


Drill 1/4" holes at pilot marking, be sure to keep the drill level. Make sure hole depth matches wall anchor length. Insert 1/4" wall anchors into drilled holes (some anchors might require a hammer).

#### Final step

Mount the scratching board with attached screws to the anchor.

#### Advice:

Please note the secure assembly and mounting requires one adult person.

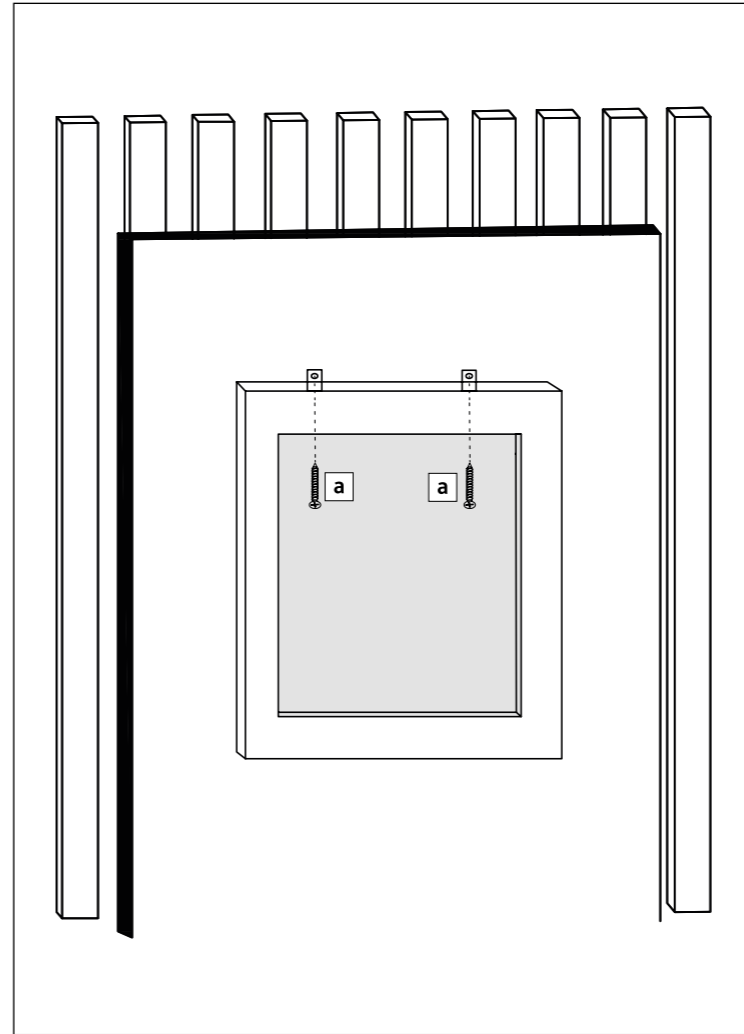

### EN Work steps for drywall with wooden drywall stud or metal stud

#### First step


Use a stud-finder or other technique to locate the studs. Please use a pencil. Bring the product in final position and mark the screw-point on the center of the stud. Use a spirit level or have someone eyeball to make sure the holes are levelled.

#### Final step

Before you start, make sure to check whether you have wooden or metal studs to select the correct screws.  
For wooden stud: Mount the scratching board with attached screws to wooden studs at pilot markings.  
For metal stud: Mount the scratching board with attached washers and screws to metal studs at pilot markings.

#### Advice:

Please note the secure assembly and mounting requires one adult person.

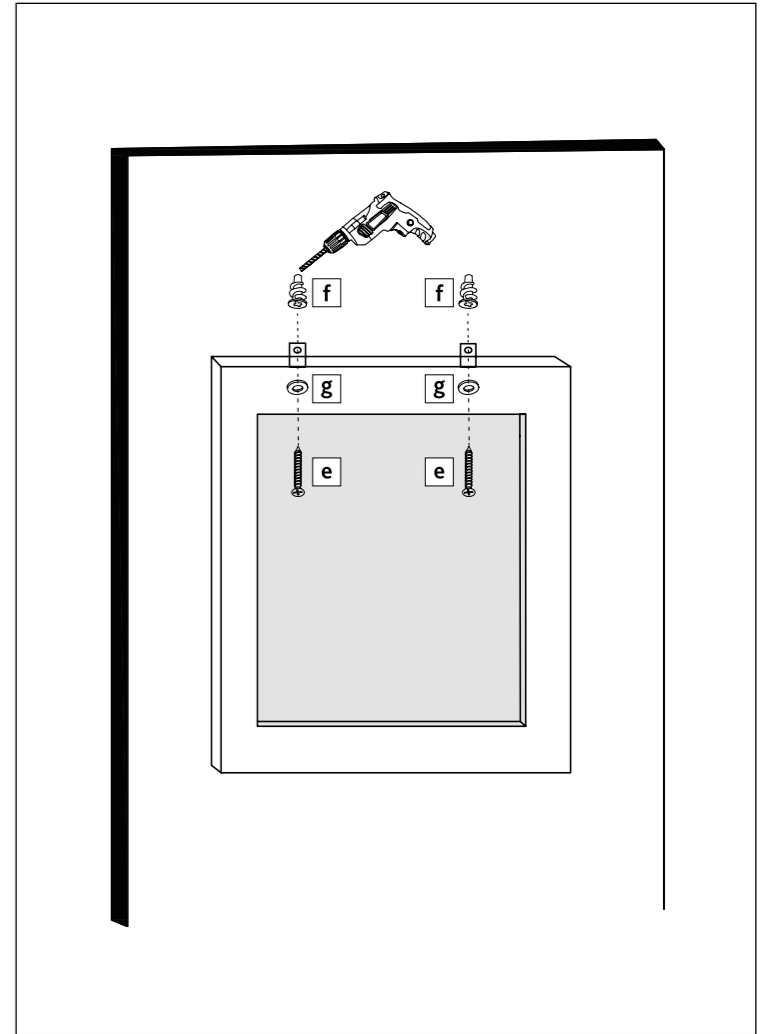

### EN Work steps for drywall - Drywall connection with drywall anchor

#### First step

Please use a pencil. Bring the product in final position and mark the screw-point on the center of the wall. Use a spirit level or have someone eyeball to make sure the holes are levelled.

#### Second step

If you use self-drilling wall anchors a pilot hole is not needed. Use your drill and the 3/16" bit to make pilot holes for maximum 1 inch to markings. Insert wall anchors for dry walls. Be careful not to break the drywall panel.

#### Final step

Mount the scratching board with attached screws to the wall anchor make sure the screws are fastened securely.

#### Advice:

Please note the secure assembly and mounting requires one adult person.