


Item No.	Scratching Post	Color	Height
44422	Aidan	beige/brown	30 x 19.3 x 53.5 in. 78 x 49 x 136 cm

Pos. No.	Description	Measurement in mm	Quantity	Item No.
Pos. 1	Bottom plate	30.3 x 18.9 in. 770 x 480 mm	1	44422-10
Pos. 2	Platform	23.6 x 13.4 in. 600 x 340 mm	1	44422-11
Pos. 3	Bed, small	DIAM 15.7 x 3.1 in. ø 400 x 80 mm	1	44422-12
Pos. 4	Cave	DIAM 18.9 x 11.8 in. ø 480 x 300 mm	1	44422-13
Pos. 5	Hammock	DIAM 15.7 in. ø 400 mm	1	44422-14
Pos. 6	Upper Bed	DIAM 18.9 x 3.1 in. ø 480 x 80 mm	1	44422-15
Pos. 7	Post, jute	DIAM 4.5 x 24 in. ø 115 x 610 mm	1	44422-20
Pos. 8	Post, jute	DIAM 4.5 19.7 in. ø 115 x 500 mm	1	44422-21
Pos. 9	Post, jute, with spacer bolt	DIAM 4.5 19.7 in. ø 115 x 500 mm	1	44422-22
Pos. 10	Post, plush	DIAM 4.5 19.7 in. ø 115 x 500 mm	1	44422-23
Pos. 11	Post, plush, with spacer bolt	DIAM 4.5 15.7 in. ø 115 x 400 mm	1	44422-24
Pos. 12	Post, plush, with spacer bolt	DIAM 4.5 9.8 in. ø 115 x 250 mm	1	44422-25
Pos. 13	Post, plush	DIAM 1.3 x 10.6 in. ø 33 x 270 mm	3	44422-26
Pos. a	Countersunk screw	M0.3 x 1.6 in. M8 x 40 mm	9	44422-60
Pos. b	Thread Rods	M0.3 x 3.1 in. M8 x 80 mm	3	
Pos. c	Allen Key		1	


Pos. a


9 x

Pos. b

3 x

Pos. c

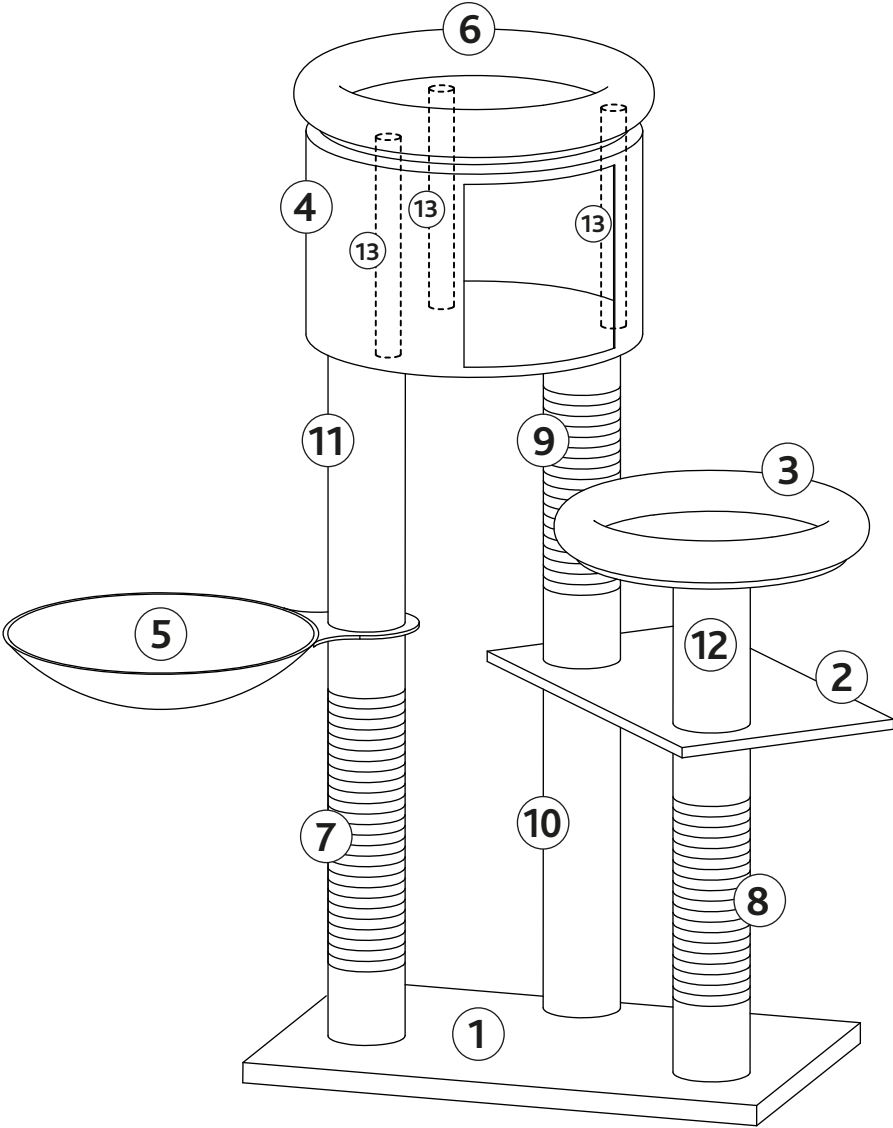
1 x

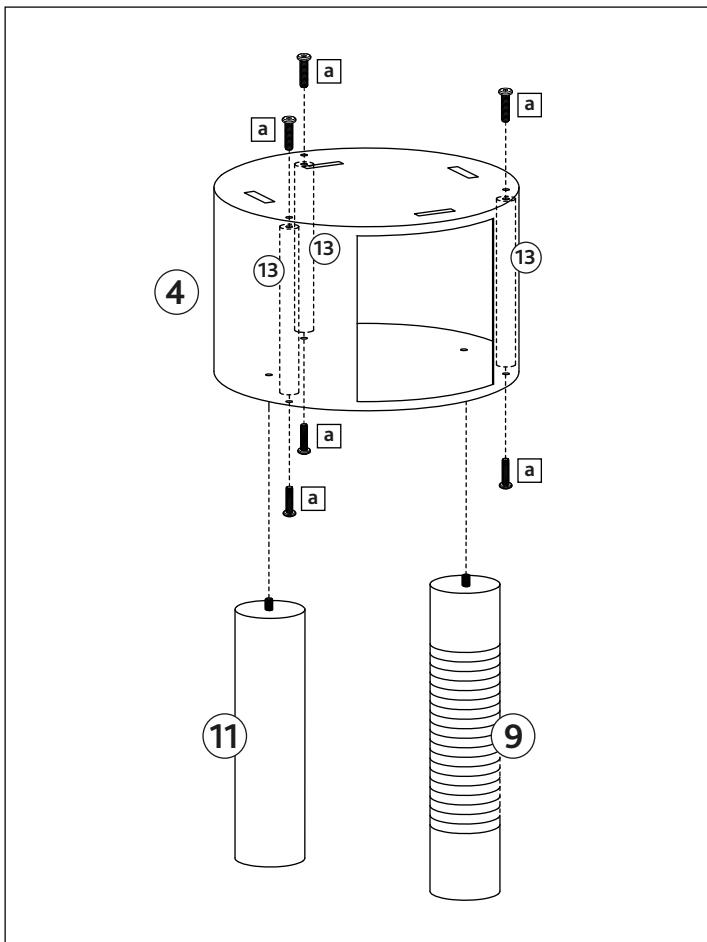



EN Step 1


To set up the condo (4), place the plush posts (13) in the desired position. Fasten them with six of the enclosed countersunk screws (a). Mount the posts with spacer bolt (9) and (11) to the base of the condo.

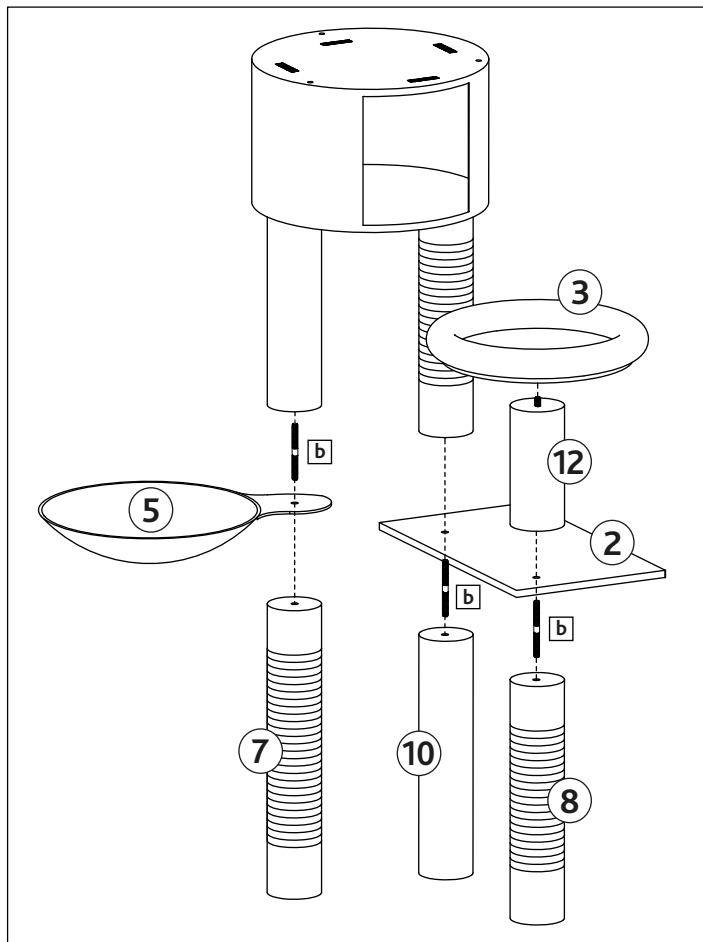

EN Step 2

Screw two thread rods (b) into the posts you have just attached to the condo. Place the hammock (5) on one side and the middle platform (2) on the other side over the thread rods from below. Now, secure these using the posts (7) and (10).

Screw the bed (3) onto the small post with spacer bolt (12). Screw the last thread rod (b) into the small post to which the bed is attached. Now insert the it from above through the second opening on the middle platform and mount the scratching post (8) from below.

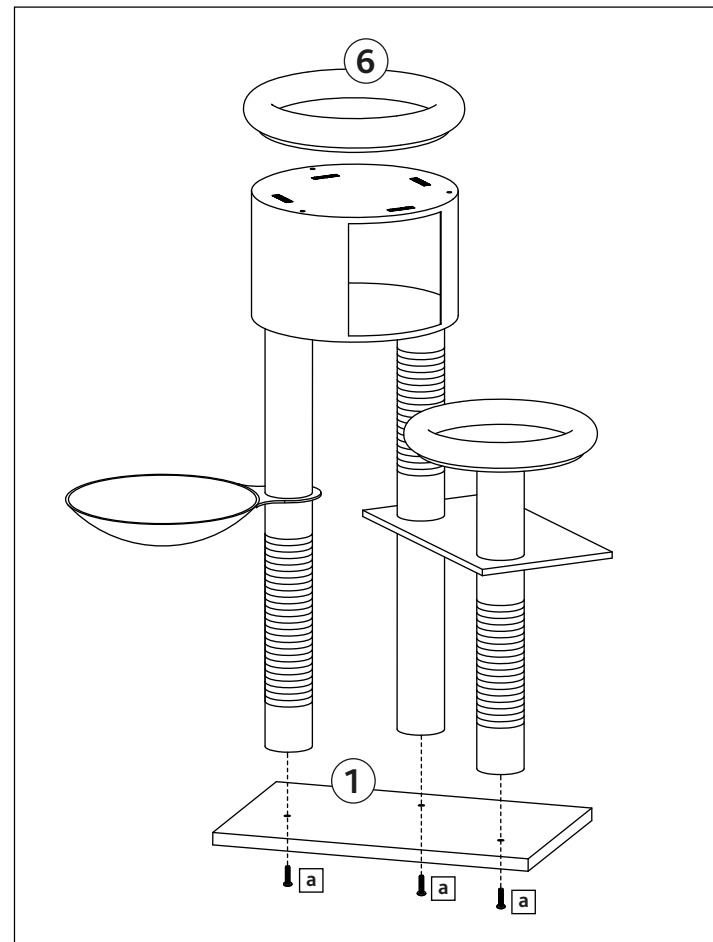

EN Step 3

Attach the bottom plate (1) to the posts with the attached countersunk screws (a). Place the removable upper bed (6) on the cave.