

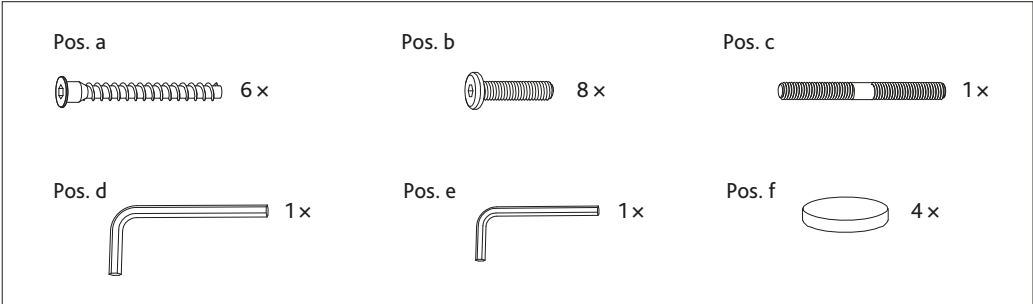


Item No.	Scratching Post	Color	Height
44483	Aspen	natural/beige	26.4 × 15.4 × 37 in. 67 × 39 × 94 cm

Pos. No.	Description	Measurement in mm	Quantity	Item No.
Pos. 1	Bottom plate	26.3 × 15.4 in. 670 × 390 mm	1	44483-10
Pos. 2	Bottom plate for condo	18.5 × 15.4 in. 470 × 390 mm	1	44483-11
Pos. 3	Top plate for condo	15.4 × 15.4 in. 390 × 390 mm	1	44483-12
Pos. 4	Middle platform	13.2 × 11.4 in. 335 × 290 mm	1	44483-13
Pos. 5	Top platform	11.4 × 15.4 in. 290 × 390 mm	1	44483-14
Pos. 6	Wooden rods with drilling holes	DIAM 0.6 × 11.6 in. ø 15 × 295 mm	3	44483-15
Pos. 7	Wooden rods	DIAM 0.6 × 11.6 in. ø 15 × 295 mm	16	44483-16
Pos. 8	Post, jute	DIAM 3.1 × 17.7 in. ø 80 × 450 mm	2	44483-20
Pos. 9	Post, jute	DIAM 3.1 × 11.8 in. ø 80 × 300 mm	3	44483-21
Pos. 10	Platform cover, sisal carpet	DIAM 8.7 in. ø 220 mm	1	44483-30
Pos. 11	Platform cover, sisal carpet	DIAM 11.8 in. ø 300 mm	1	44483-31
Pos. 12	Cushion for top platform	15.4 × 11.4 in. 390 × 290 mm	1	44483-40
Pos. 13	Cushion for condo	17 × 12.6 in. 430 × 320 mm	1	44483-41
Pos. a	Countersunk screw	M5 × 1.6 in. M5 × 40 mm	6	44483-60
Pos. b	Countersunk screw	M8 × 1.6 in. M8 × 40 mm	8	
Pos. c	Thread rod	M8 × 3.1 in. M8 × 80 mm	1	
Pos. d	Allen key for countersunk screw pos. b	M8	1	
Pos. e	Allen key for countersunk screw pos. a	M5	1	
Pos. f	Floor protection pads		4	

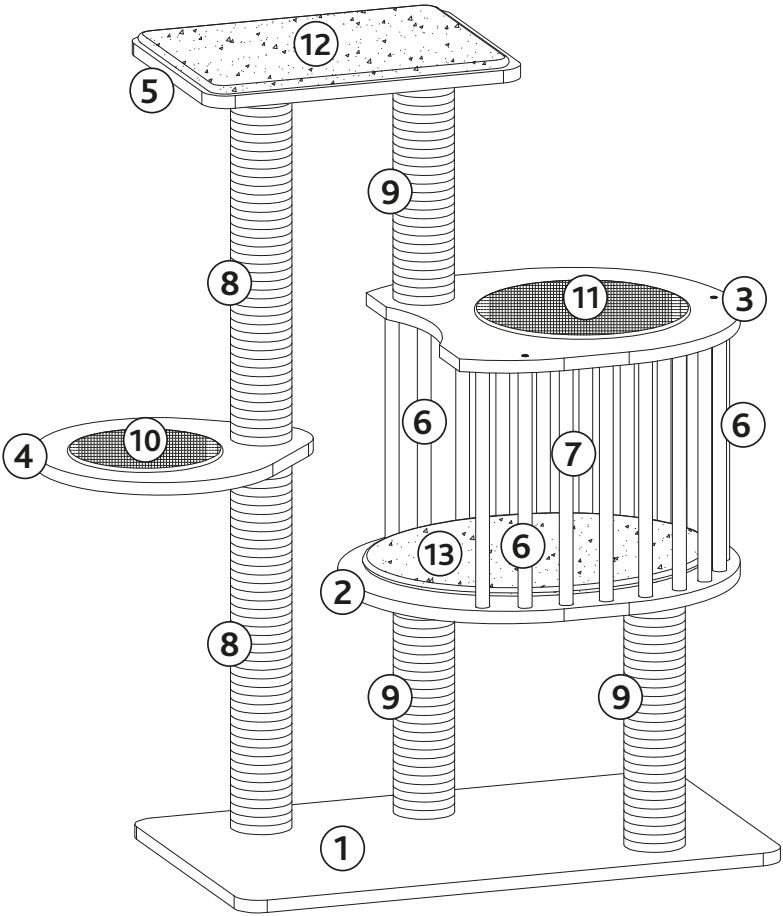


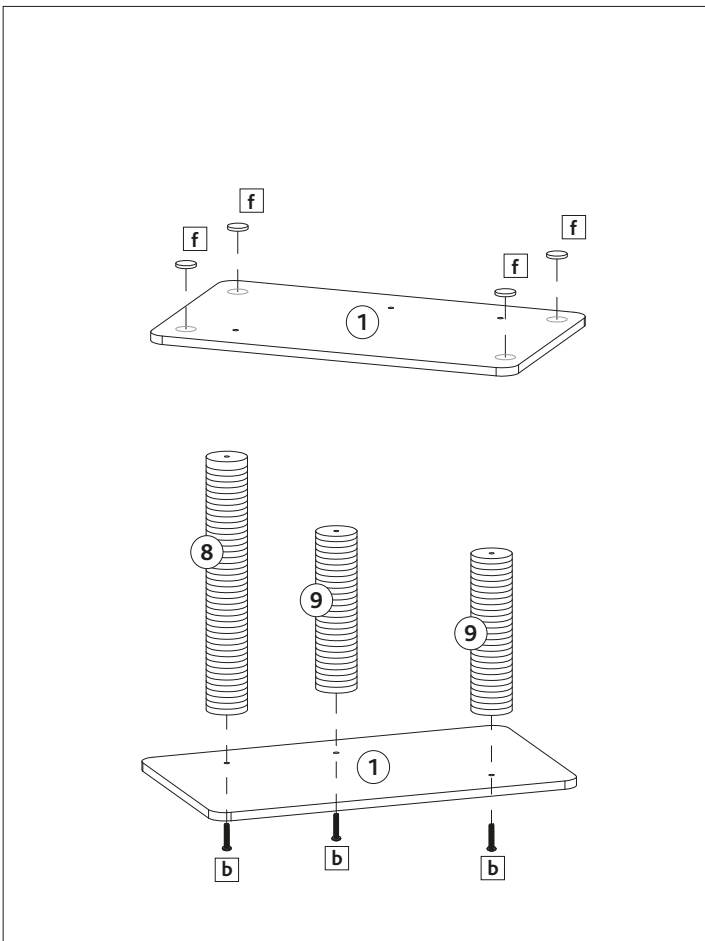

EN Step 1

Attach the 4 floor protection pads (f) to the bottom side of the bottom plate (1).


Attach the three scratching posts (2x (9), 1x (8)) to the bottom plate using the countersunk screws (3x (b))

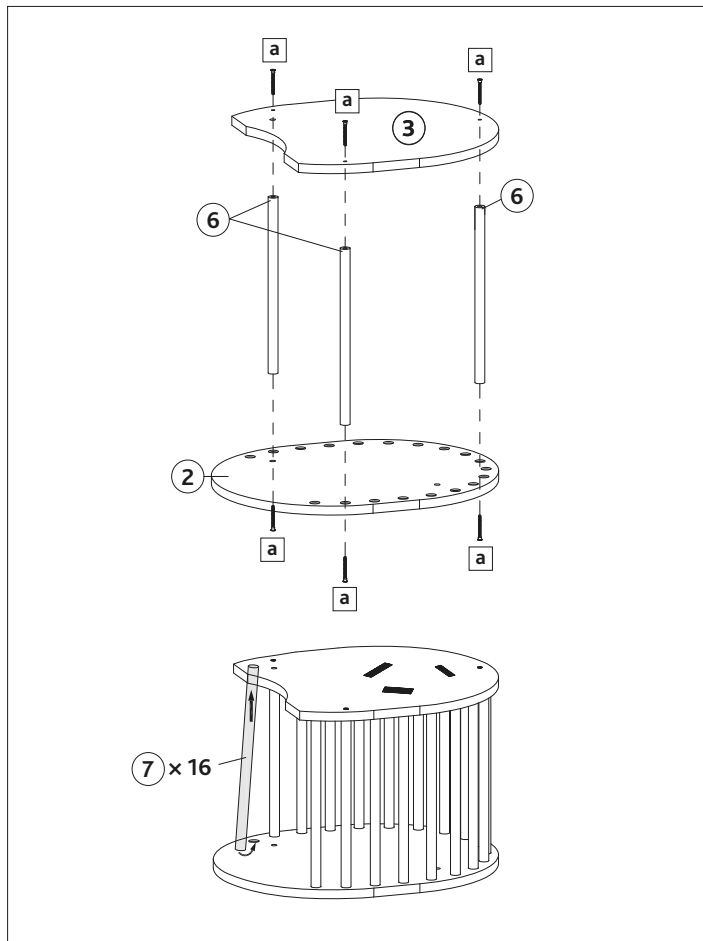

EN Step 2

Attach the top plate for the condo (3) to the bottom plate for the condo (2) by screwing the three wooden rods with drilled holes (6) into the holes provided on both panels using the enclosed screws (a).

Attach the other 16 wooden rods around the perimeter of the structure and connect them to both panels.

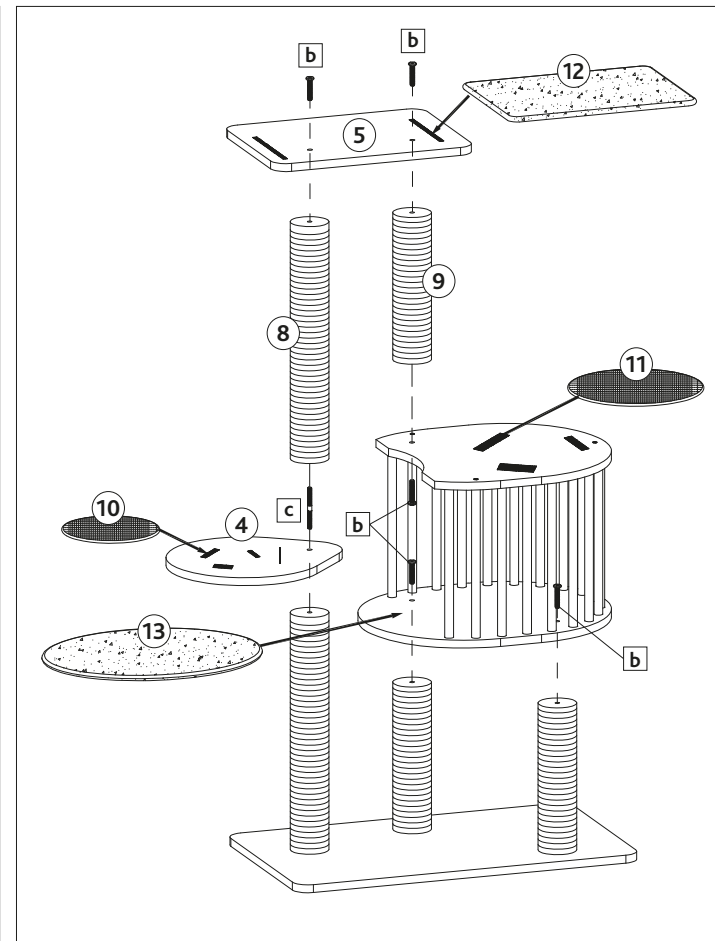

EN Step 3

Attach the condo to the two lower posts that are attached to the bottom plate using the two enclosed countersunk screws (b).

Afterwards, screw the post (9) above the condo using another countersunk screw (b).

Now, attach the middle platform to the remaining scratching post, which is attached to the bottom plate, using a thread rod (c). Then screw the post (8) to the other side of the thread rod to secure the middle platform.

Attach the upper platform to the two posts using the last two countersunk screws (b).

Finally, attach the two platform covers (10 & 11) to the platforms and place the cushions (12 & 13) on the designated lying areas.