


Item No.		Measurement in in./cm	Color	
49893	Well art 2, 2 store	3 × DIAM 7.1 × 8.7 in.	natural/white	
49962	Wall set 3, 3 steps	3 × ø 18 × 22 cm	white/gray	


Description	Measurement in in./mm	Quantity	Item No.	
Description			49893	49962
Climbing step	DIAM 7.1 x 8.7 in. ø 180 x 220 mm	3	49893-10	01-49945
Hardware set		1	49891-60	


Pos. No.	Description	Measurement in in./mm	Quantity
Pos. a	Metal holder		3
Pos. b	Wood screw (for wooden wall or wooden stud)	DIAM 0.2 × 1.9 in. ø 5 × 48 mm	6
Pos. c	Screw for stone wall	DIAM 0.25 × 2.2 in. ø 6,3 × 55 mm	6
Pos. d	Stone wall anchor, plastic	DIAM 0.25 × 2.2 in. ø 6,3 × 55 mm	6
Pos. e	Metal screw (for metal stud)	DIAM 0.15 × 1.5 in. ø 4 × 37 mm	6
Pos. f	Dry wall screw	DIAM 0.15 × 1.1 in. ø 4 × 28 mm	6
Pos. g	Dry wall anchor, metal	DIAM 0.5 × 1.3 in. ø 13 × 32 mm	6
Pos. h	Washer	DIAM 0.4 in. ø 10 mm	6




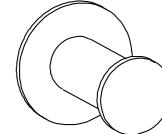




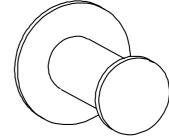





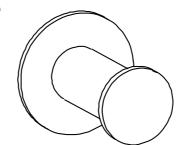




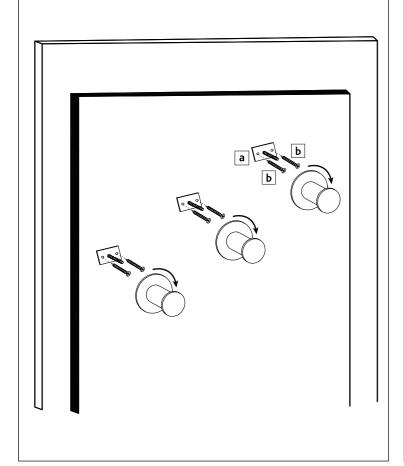

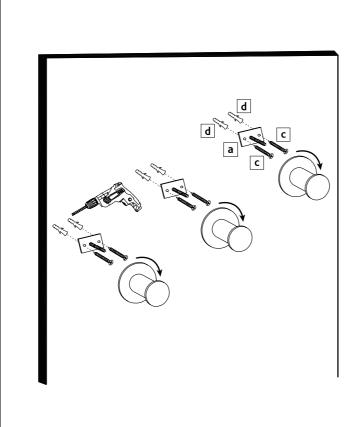

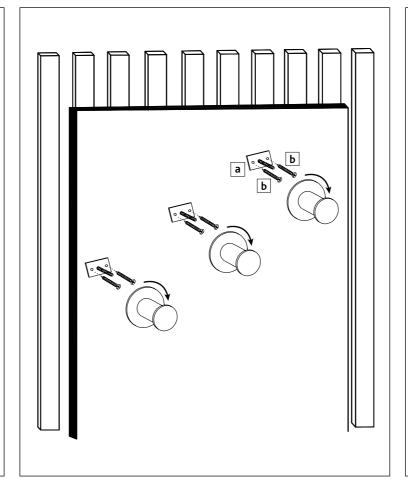

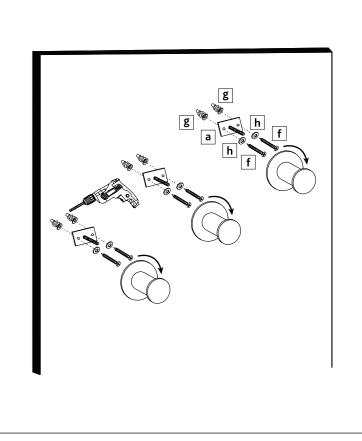

# (EN) Work steps for wooden wall

#### First ste

Please use a pencil. Bring the metal holder in final position and mark the screw-points in desired location. Use a spirit level or have someone eyeball to make sure the holes are levelled.

#### Second step

Mount the metal holder with attached screws to wooden wall at pilot markings.

### Final step

Connect the steps to the metal holder and attach cap.

#### Advice

Please note the secure assembly and mounting requires one adult person.

# (EN) Work steps for stone wall or plaster wall with anchors

### First step

Bring the metal holder in final position and mark the screw-points in desired location. Use a spirit level or have someone eyeball to make sure the holes are levelled.

## Second Step

Drill 1/4" holes at pilot marking, be sure to keep the drill level. Make sure hole depth matches wall anchor length.

Insert 1/4" wall anchors into drilled holes (some anchors might require a hammer).

# Third step

Mount the metal holder with attached screws and matching wall anchors to the wall.

## Final step

Connect the steps to the metal holder and attach cap.

#### Advice

Please note the secure assembly and mounting requires one adult person.

# (EN) Work steps for drywall with wooden drywall stud or metal stud

### First step

Use a stud-finder or other technique to locate the studs. Please use a pencil. Bring the metal holder in final position and mark the screw-point on the center of the stud. Use a spirit level or have someone eyeball to make sure the holes are levelled.

## Second step

Before you start, make sure to check whether you have wooden or metal studs to select the correct screws.

For wooden stud: Mount the metal holder with attached screws to wooden studs at pilot markings.

For metal stud: Mount the metal holder with attached washers and screws to metal studs at pilot markings.

# Final step

Connect the steps to the metal holder and attach cap.

#### Advice:

Please note the secure assembly and mounting requires one adult person.

# (N) Work steps for drywall - Drywall connection with drywall anchor

# First step

Please use a pencil. Bring the metal holder in final position and mark the screw-point on the center of the wall. Use a spirit level or have someone eyeball to make sure the holes are levelled.

## Second step

If you use self-drilling wall anchors a pilot hole is not needed. Use your drill and the 3/16" bit to make pilot holes for maximum 1 inch to markings. Insert wall anchors for dry walls. Be careful not to break the drywall panel.

# Third step

Mount the metal holder with screws to the wall anchor make sure the screws are fastened securely.

## Final step

Connect the steps to the metal holder and attach cap.

#### Advice.

Please note the secure assembly and mounting requires one adult person.